

Single-Target Step-Response Comparison

Lap 2 | Target Point: (5.000, 1.000) m | Generated: 2026-04-13 17:56:09


Criteria: axis rel tol=0.050, axis abs tol=0.200 m, distance tol=0.300 m

Controller	Lap Time [s]	X Rise [s]	X Over [%]	X Settle [s]	Y Rise [s]	Y Over [%]	Y Settle [s]	Min Dist [m]	Hit Dist Tol [s]
Pure Pursuit	9.003	0.135	350.544	Not Settled	1.534	965.529	Not Settled	0.640	Not Available
PINN Drive	8.151	0.243	193.845	Not Settled	0.753	697.029	Not Settled	0.989	Not Available
NN AI Controller	8.805	0.383	80.981	Not Settled	1.199	658.016	Not Settled	0.564	Not Available

Notes: 'Not Settled' means the signal did not enter and remain inside tolerance until the end of lap.

Lower values are better for rise time, settling time, overshoot, and distance metrics.

Target-Point Response Signals

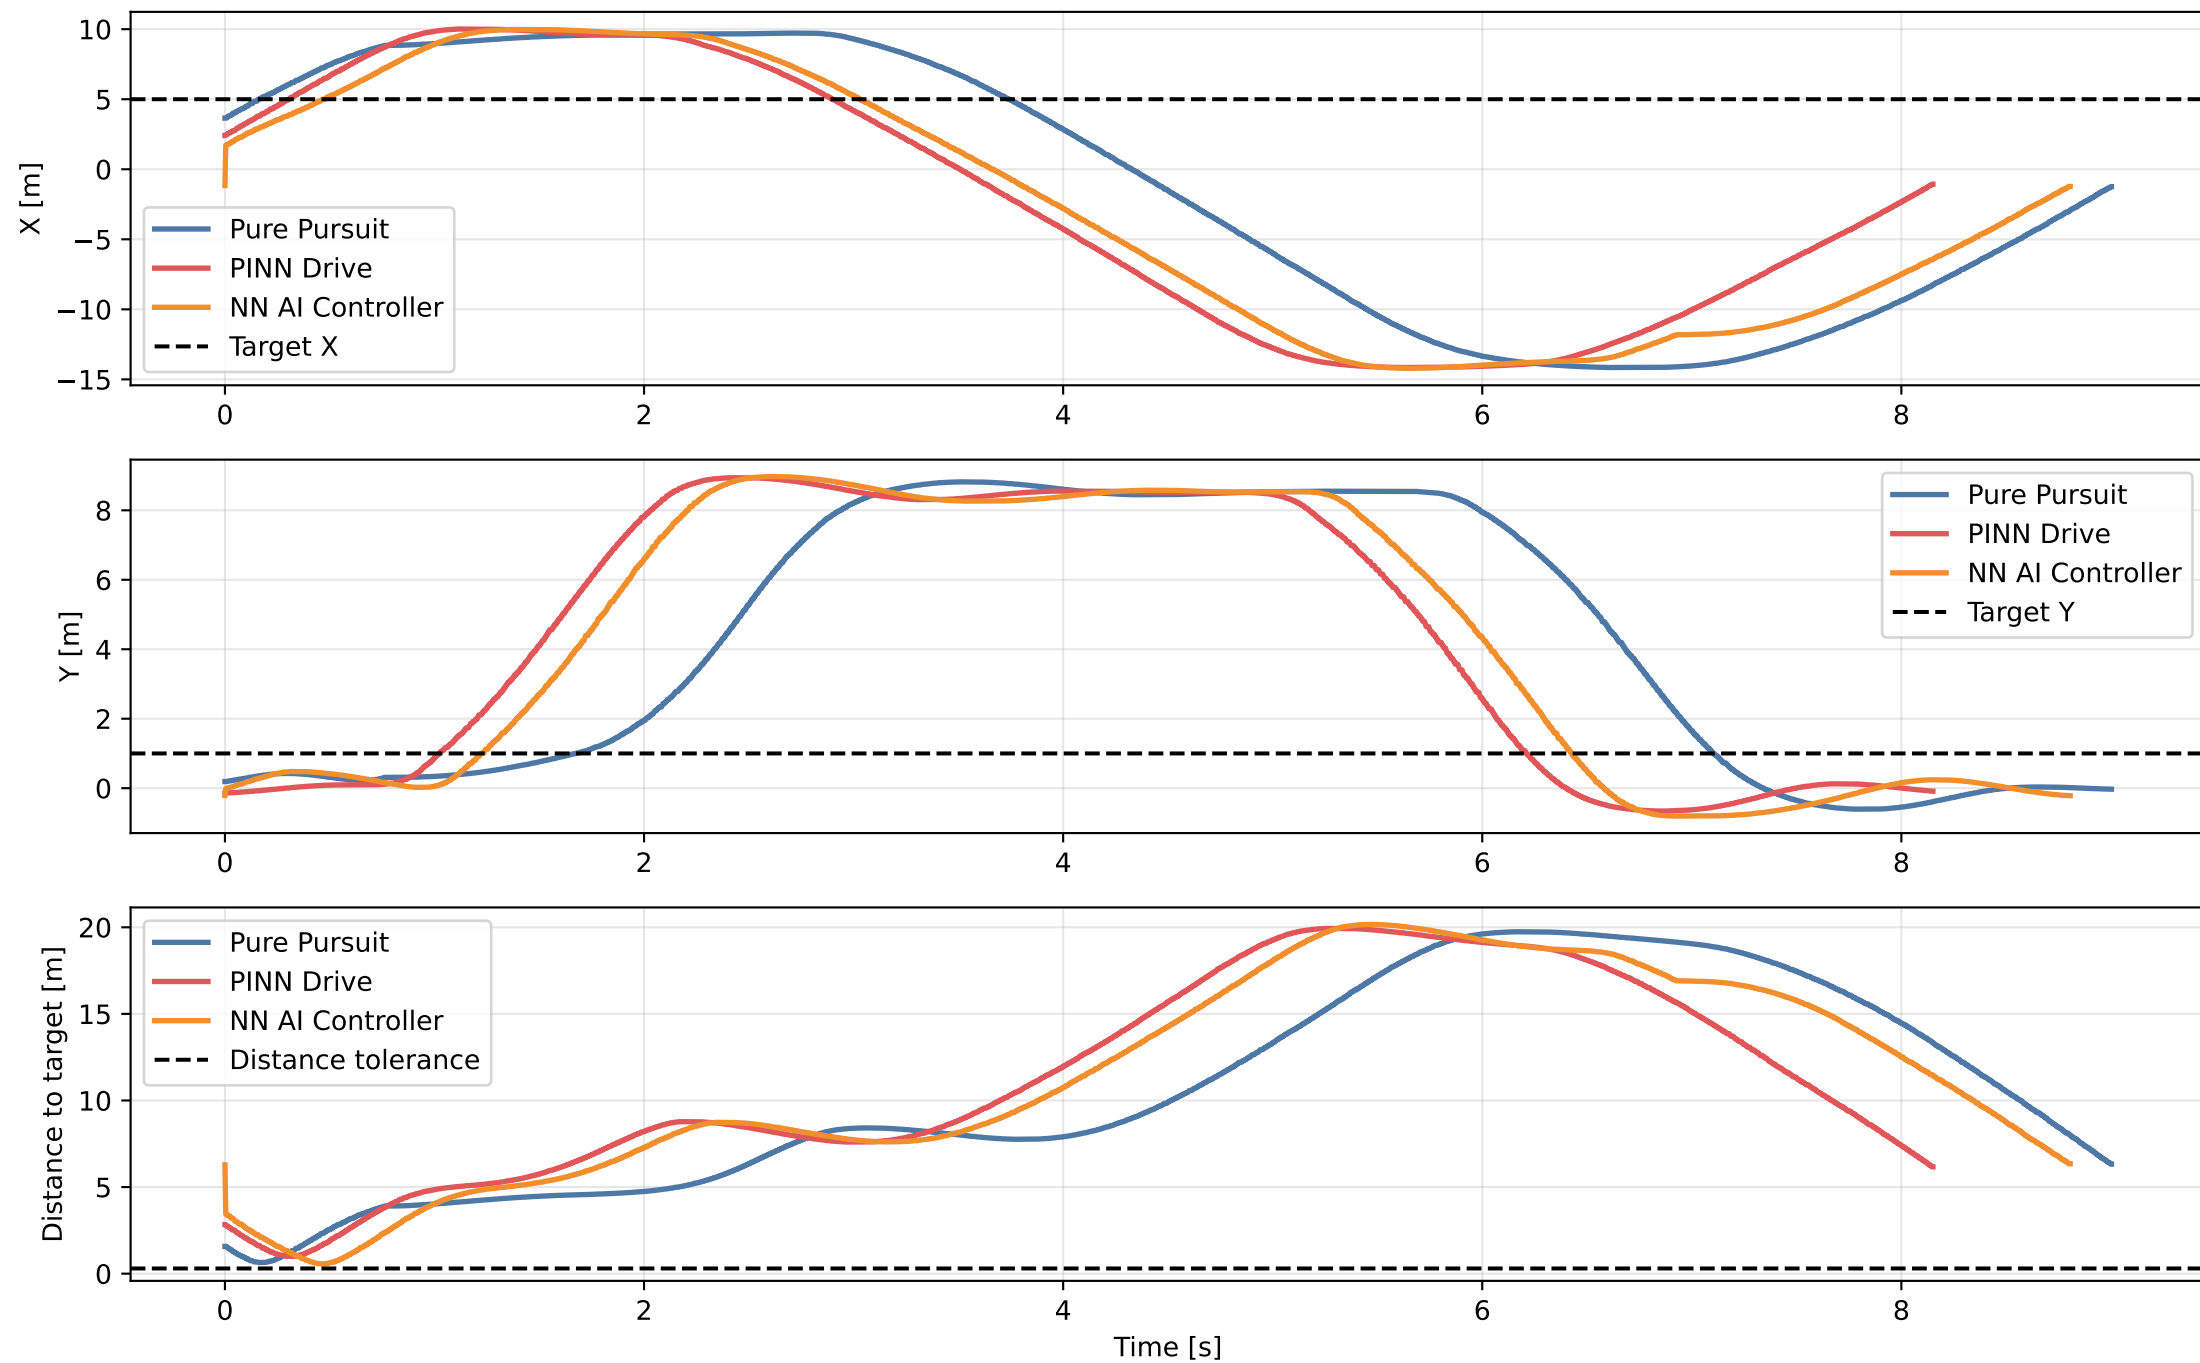

Step Response vs Time (Single Graph)

